SD8

STEAM & DETERGENT 8 BAR

Quick Start Guide

Get setup and ready to clean

WHAT'S INCLUDED

 SD8	 Mains Power Cable 11RM00061 (UK) 11RM00062 (EU)	 User Manual	 Quick Start Guide	 4 Metre Hose 19RM00805
 2 x Extension Tubes 19RM00810	 Floor Brush 19RM00815	 Triangular Brush 19RM00820	 Brush Elbow 19RM00825	 Window Squeegee 19RM00830
 Long Steam Nozzle 19RM00835	 Curved Nozzle 19RM00840	 Detail Brush Nozzle 19RM00850	 *5 x Nylon Brushes 19RM00857	 *5 x Brass Brushes 19RM00862
 55mm Round Brush 19RM00875	 Holdall 18RM00004	 Service Kit	 Glasses	 Gloves

* Replacement brushes are supplied as a pack of 10


WHAT YOU NEED

- Wear safety shoes gloves, goggles and any other PPE as specified by local regulations
-  Please read and comply with the safety instructions found in the user manual prior to using the machine. Retain this document for future reference. These instructions are also available on our website: www.matrixcleaningsystems.co.uk
- Areas to clean

Lets get started

GET TO KNOW YOUR MACHINE



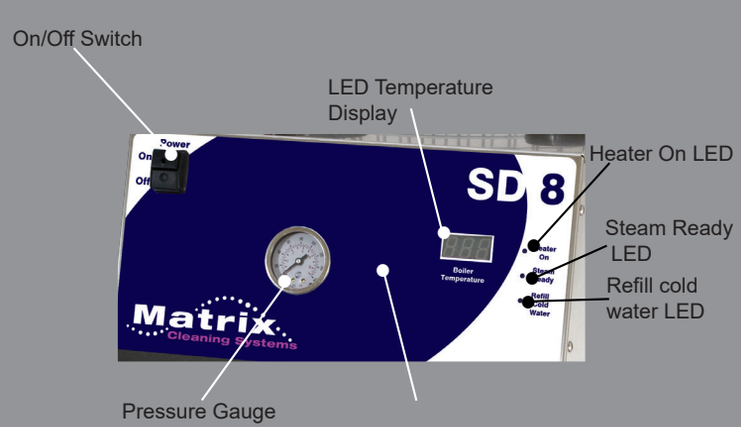

www.matrixcleaningsystems.co.uk

MATRIX CLEANING SYSTEMS LTD, Unit H, Leyland Business Park, Centurion Way, Farington, Leyland, PR25 3GR, UK Tel: +44 1772 431906 Fax: +44 1772 431902

PREPARE YOUR MACHINE




1. Using clean cold water fill the cold water tank and replace the cap.




2. Fill the detergent tank with suitable detergent



3. Lift the flap on the steam hose socket and connect the hose ensuring the pin locks into position.

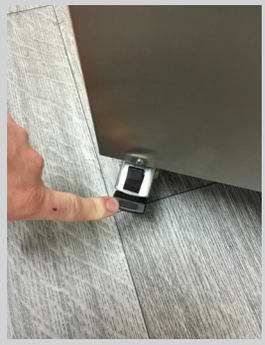

4. Push your machine to a suitable area and lock the brake lever to avoid the machine moving during use.

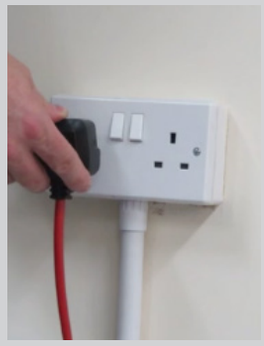


5. Plug your machine into a suitable power supply.


Switching on the machine



6. Turn ON the machine with the on/ off switch.

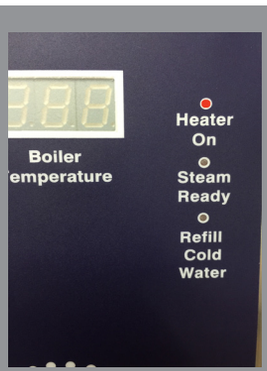

7. The heater on LED will illuminate.

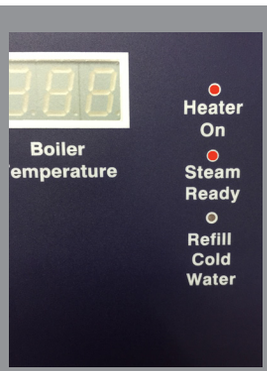

8. In Approx. 10 mins the steam ready LED will illuminate. The machine is now ready to be used.



9. The steam or detergent will disperse when pressed


During use



9. The steam output can be adjusted by turning the steam control.



10. Affix your desired accessory for your cleaning task and ensure it is locked into position.

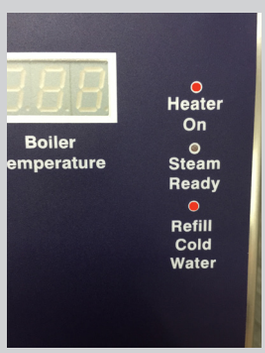

11. Refill Cold water when the refill cold water light illuminates and a intermittent beeping noise can



12. If the detergent stops refill the detergent tank with suitable detergent

WB FLOOR MACHINES
SALES · SERVICE · HIRE

01293 852022
info@wbfloormachines.co.uk
www.wbfloormachines.co.uk
Unit 7 Burns Way, Holmbush Potteries Estate, Horsham RH12 4ST